


Whirlpool Washer Load Size How To!

Helpful tip from our South Duff Maintenance Supervisor, Maurice Passwater, to avoid a washing machine overflow!



How do you set the Washer Load Size correctly?

- ✓ Below is the Control Board for your Whirlpool Washer and Dryer Unit
 - Please note some Apartments may have a different washer/dryer unit that this will not apply to

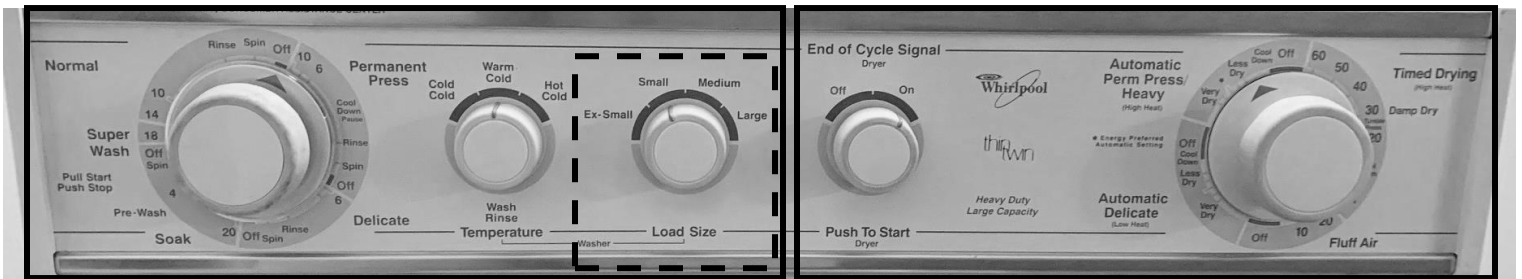

WASHER CONTROLS

DRYER CONTROLS



- ✓ You will find the Load Size marked above with four size options (Ex-Small, Small, Medium, Large)
 - Blown up images below



CORRECT SETTING – The control knob dash (grey) is pointed towards the load size between the load size dashes (white)



INCORRECT SETTING – The control knob dash (grey) is lined up with the load size dashes (white) and not at a specific size

- ✓ It's important to let the control knob guide you to the correct setting where it will click into place
- ✓ When the dashes are lined up and a specific load size is not selected the washing machine will continue to fill up with water and not stop causing the machine to overflow

Thank you for taking the time to read through this Quick Tip!